


Boa Horse Boot Sizing (sold as pairs).

Size	Width in inches	Length in inches	Size	Width in mm	Length in mm
00	3 1/2" - 3 7/8"	4 - 4 3/8"	00	89-98 mm	101-111 mm
0	3 7/8" - 4 1/4"	4 3/8" - 4 5/8"	0	98-108 mm	111-117 mm
1	4 1/4" - 4 7/8"	4 5/8" - 5 1/8"	1	108-124 mm	117-130 mm
2	4 7/8" - 5 1/4"	5 1/8" - 5 3/8"	2	124-133 mm	130-136 mm
3	5 1/4" - 5 7/8"	5 3/8" - 5 7/8"	3	133-149 mm	136-149 mm
4	5 7/8" - 6 1/4"	5 7/8" - 6 1/4"	4	149-159 mm	149-159 mm
5	6 1/4" - 6 11/16"	6 1/4" - 6 11/16"	5	159-169 mm	159-169 mm
6	6 11/16" - 6 15/16"	6 11/16" - 6 15/16"	6	169-176 mm	169-176 mm
7	6 15/16" - 7 3/8"	6 15/16" - 7 3/8"	7	176-186 mm	176-186 mm
8	7 3/8" - 7 1/2"	7 3/8" - 7 7/8"	8	186-192 mm	186-200 mm

It is important to match the width and length of the hoof to the Boa Horse Boot™ size. The front hooves of most horses tend to be more round and wider than the hind hooves. The best fit may require a smaller size for the hind.

How to get the correct size boot for your horse:

1. Measure the width of the hoof across the bottom at the widest point.
2. Measure the length of the hoof from the toe to the buttress line of the heel. The buttress line is the farthest weight bearing point of the heel.
3. Compare your measurement with the proper size chart. If you are taking your measurements in inches, use the imperial size chart. If you are taking your measurements in millimeters, use the metric size chart.
4. Ideally, the width and length measurement will fit into the same Boa Horse Boot™ size. If the width and length measurements indicate different Boa Horse Boot™ sizes, select the larger Boa Horse Boot™ size.

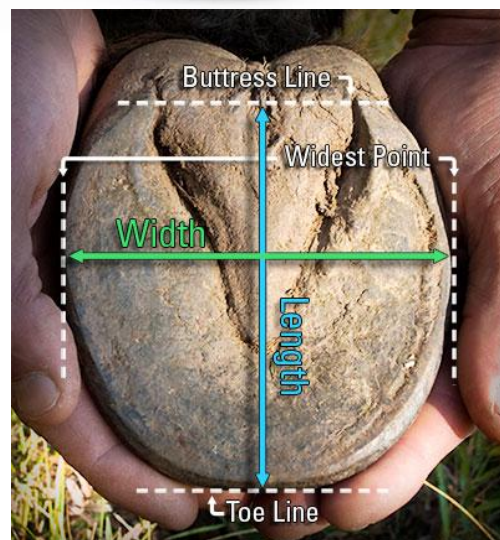

To order go to www.easycaredownunder.com.au or phone 02 4455-2440