





How to measure for the Easyboot Glove & Glue on Shells:

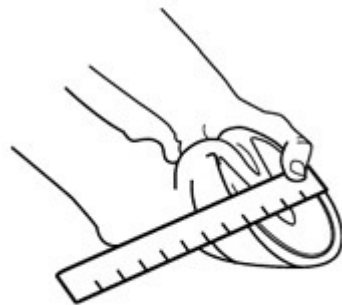

Measuring for
Hoof Width

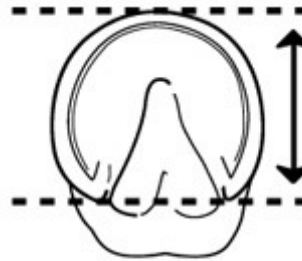

Measuring for
Hoof Length

Success of the Easyboot Glove and Easyboot Glue-On are determined by accurate measurements and a snug fit.

1. After a fresh trim, measure the width of the hoof across the bottom at the widest point.
2. Measure the length of the hoof from the toe to the buttress line of the heel. The buttress line is the farthest weight bearing point of the heel where the hoof wall ends. Do not include the heel bulbs in the measurement.
3. Compare your measurements with the appropriate size chart. Ideally, the length and width measurements should fit into the same size on the chart.

Because this boot needs to fit very snug, if you are a size apart we recommend that you order a fit kit. If you find the Glove not suitable be sure to check the requirements and measurements against an alternative boot in the EasyCare line. Another style may accommodate your horse's hoof shape better.

Size	Width in mm	Length in mm
00	96-99mm	106-109mm
00.5	100-103mm	110-113mm
0	104-107mm	114-117mm
0.5	108-111mm	118-121mm
1	112-115mm	122-125mm
1.5	116-119mm	126-129mm
2	120-123mm	130-133mm
2.5	124-127mm	134-137mm
3	128-131mm	138-141mm
3.5	132-135mm	142-145mm
4	136-139mm	146-149mm

We have found that measurements are more accurate and easier to take using the metric system.

Want to be sure of a perfect fit?

We offer "fit kits" to help you try before your buy. Ring our office on 02 6493 6955 (office hours) or email easycaresdownunder@bigpond.com to book your kit.

There are hoof shapes that will not work well with the Glove Boots. If you are worried about choosing this boot call and speak to our consultant for advice.